

# INSTALLATION INSTRUCTIONS

TOYOTA CAMRY 2005 -

HD 20D 05

## Hardware Kit

- 3 – Large Bumpoms
- 6 – 3M Anti-Abrasion Film Pads
- 6 – Black “C” Clips
- 6 – # 6 x 3/8” Screws
- 6 – # 4 x 3/16” Screws

## Tools Required

- 1 – Phillips Screwdriver # 2
- 1 – Phillips Screwdriver # 1




## Installation


1. Be sure that the hood is clean and dry inside and out. Release the hood, but do not open it.
2. Install one (1) bumpon, in the middle of the hood, 1” back from the edge of the hood. Install remaining two (2) bumpoms, 4 1/2” back from the edge of the hood. *See Illustration # 1.*
3. Center the protector on the hood; attach the anti-abrasion film pads under the middle hole on each side as shown in the illustration # 2. Make sure to cover at least 1/2” of underside of the hood. *See Illustrations # 3.*
4. Slide the “C” clips over the edge of the hood in line with *the middle holes* in the protector. Be sure that the “C” clips are well seated against the hood: it may be necessary to tap on the clips. Tighten a # 6 x 3/8” screw through the protector into the top of each clip. **Do not over tighten the screws.** *See Illustration # 3.*
5. Make sure that the protector is centered on the hood then repeat steps 3 & 4 for the each of remaining holes.
6. Make sure the “C” clips are all fully seated and the protector is centered then tighten a # 4 x 3/16” screw into the bottom of each of the “C” clips. **Do not over tighten the screws.** *See Illustration #3.*

**Note: Do not pull on the protector when opening or closing the hood.**

## Illustration # 1. – Bumpon Location

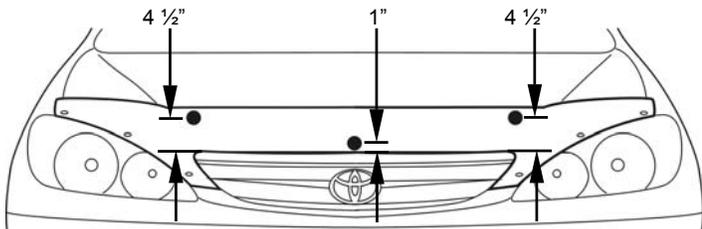


## Illustration # 2. – Clips Locations

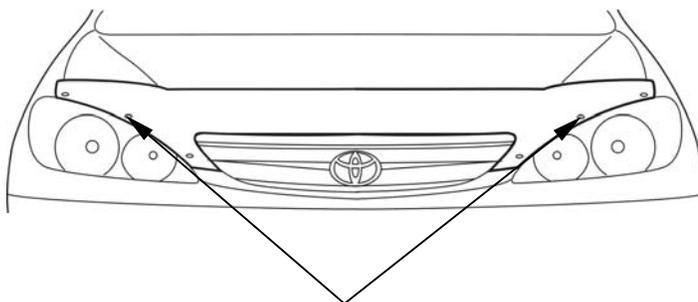

Clips Locations (Steps # 3 & 4)

## Illustration # 3. – Clip Configuration

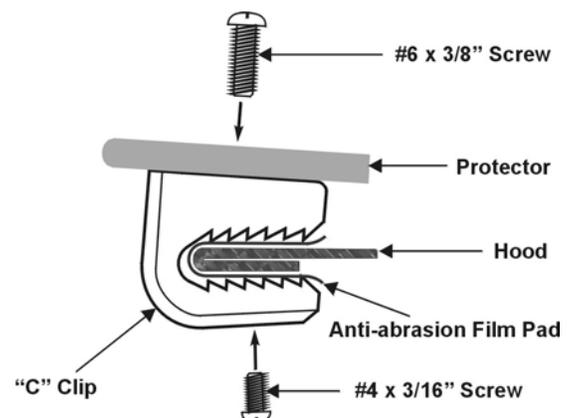

## Care Instructions

**Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents.**

Periodically check to make sure the bumpon is in place and the protector is secure.

**Avoid using automatic car washes.** Do not pull on the protector when opening or closing the hood.

Thank you for purchasing a **FORM FIT** hood protector.  
Retain this sheet for care instructions and hardware kit information.



Rev0.040825

# INSTRUCTIONS D'ASSEMBLAGE

TOYOTA CAMRY 2005 -

HD 20D 05

## Sachet de fixation

- 3 – Grosse butée
- 6 – Tampons anti-abrasifs 3M
- 6 – Agrafes noires « C »
- 6 – Vis (n° 6 x 3/8 po.)
- 6 – Vis (n° 4 x 3/16 po.)

## Outils requis


- 1 – Tournevis à embout étoilé (n°2)
- 1 – Tournevis à embout étoilé (n°1)




## Installation

1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. Déclencher le capot mais ne pas l'ouvrir.
2. Coller une (1) butée, centré sur le capot à 1 po. en haut de la bordure avant du capot. Installer deux (2) butées à 4.5 po. en haut de la bordure avant du capot. *Voir l'illustration n° 1.*
3. Centre le protecteur sur le capot. Plier en deux un tampon anti-abrasif sur la bordure du capot sous les trous inférieure – voir *l'illustration n° 2.* S'assurer à couvrir au moins ½ pouce au-dessous du capot. *Voir l'illustration n° 3.*
4. Glisser les agrafes « C » par-dessous chaque tampons anti-abrasifs, s'aligné avec leurs propres trous. S'assurer que les agrafes « C » sont bien fixées contre le capot : il peut être nécessaire de pousser sur les agrafes « C » pour qu'ils siègent bien au capot. Serrer un vis n° 6 x 3/8 po. au travers du protecteur et dans le dessus des agrafes « C ». **Ne pas trop serrer.** *Voir l'illustration n° 3.*
5. S'assurer que le protecteur est bien centré sur le capot puis répéter les étapes 3 & 4 pour les autres trous.
6. S'assurer que les agrafes restent bien centré, puis serrer chaque vis n° 4 x 3/16 po. dans la partie inférieure des agrafes « C ». **Ne pas trop serrer.** *Voir l'illustration n° 3.*


## Illustration n° 1 – Emplacement des butées

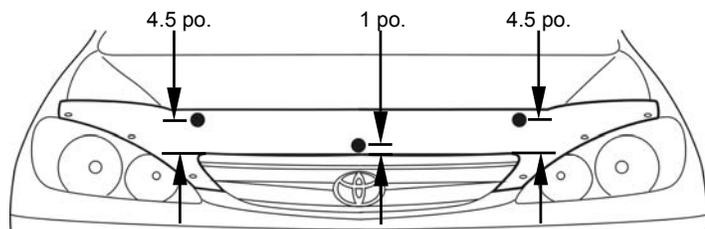

## Illustration n° 2 – Emplacement des agrafes

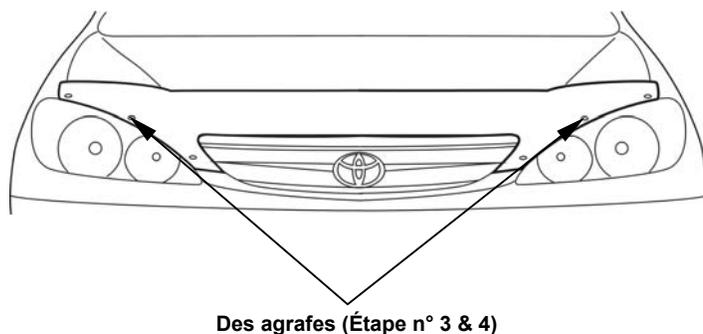

## Illustration n° 3 – Configuration des agrafes

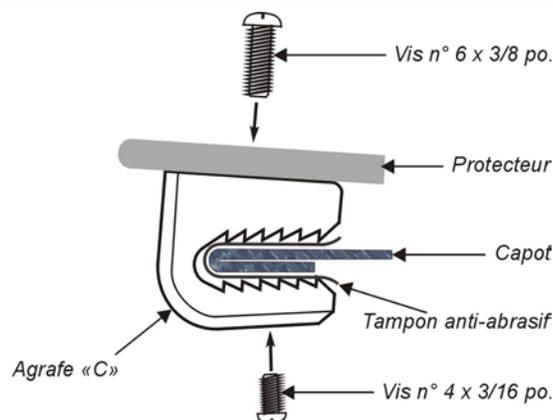

## Instructions pour l'entretien

Nettoyer le protecteur avec une solution d'eau et de savon doux ou avec un nettoyant de plastique seulement.

**Ne pas utiliser de produits chimiques ou de dissolvants.** Périodiquement s'assurer que la butée est toujours en place et que le protecteur est toujours bien retenu. **Éviter de laver le véhicule dans un lave-auto automatique.** Ne pas tirer sur le protecteur pour ouvrir et fermer le capot.

Merci de vous êtes procuré un protecteur **FORM FIL**.

Conserver cette feuille pour connaître les instructions d'entretien et les renseignements concernant le nécessaire d'installation.