

FORM FIT HOOD PROTECTOR

Cadillac Escalade 2002 -

HDW 4F 02

Hardware Kit

- 2 – Small Bumpons
- 4 – Large Bumpons
- 4– 3M Anti-abrasion Film Pads
- 4 – Black 'C' Clips
- 4 – #6 x 3/8" Screws
- 4 – #4 x 3/16" Screws

Tools Required

- 1 – Phillips Screwdriver #1
- 1 – Phillips Screwdriver #2



Installation

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Attach the two (2) small bumpons to the top of grill as shown in Illustration #1. **Attention: The bumpons must be installed on the grill not the protector!!!!** If the bumpons are installed on the protector, they will wear through the grill.
3. Center the protector on the hood, resting on the bumpons.
4. Attach the anti-abrasion film pads to the hood in line with the holes in the leading edge of the protector. Make sure to cover at least 1/2" of the underside of the hood. See Illustrations #2.
5. Slide the "C" clips on the hood in line with the holes in the protector. Be sure that the "C" clips are well seated against the hood; it may be necessary to tap on the clips. See Illustration #2.
6. Be sure that the hole in the top of the clips lines up with the hole in the protector, and then tighten the #6 x 3/8" screws, through the protector and into the top of the "C" clips. Do not over tighten. See Illustration #2.
7. Make sure all the clips are well seated against the hood. Tighten the #4 x 3/16" screws in the back of the "C" clips. See Illustration #2.
8. Install the four (4) large bumpons as shown in Illustration #1. **Attention: the bumpons must be installed on the hood, not on the protector!!!!** If the bumpons are installed on the protector, they will wear through the paint.
9. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

Note: Do not pull on the protector when opening or closing the hood.

Care Instruction

Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure that the bumpons are in place and that the protector is secure. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Illustration #1: Bumpon Location


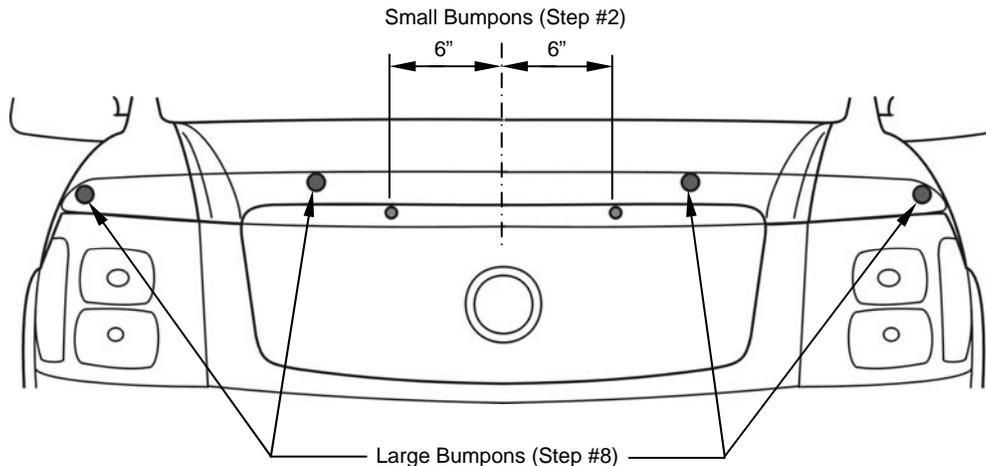


Illustration #2: Clip Location and Configuration

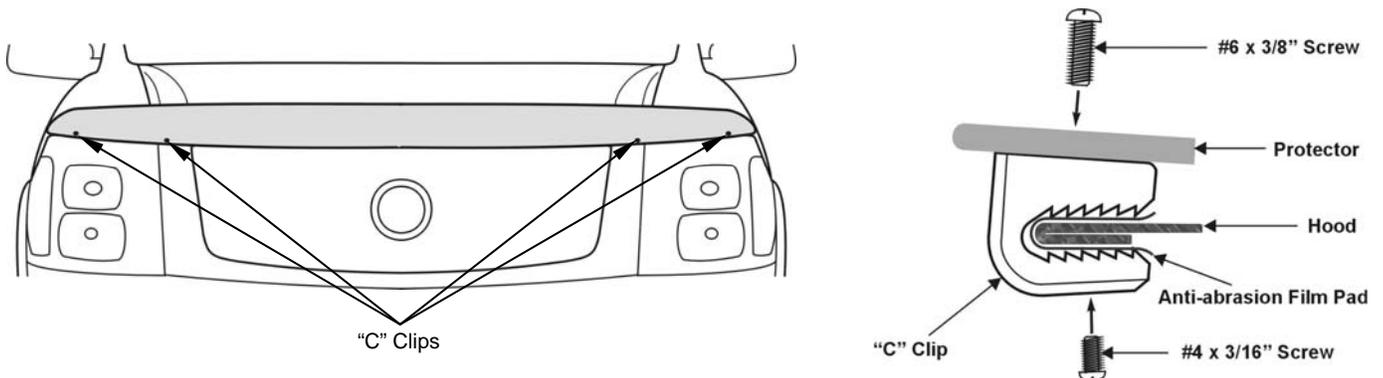

Thank you for purchasing a **FORM FIT** hood protector.
Retain this sheet for care instructions and kit information
Made in Canada
Rev1.040505

Sachet de fixation

- 2 – Petites Butées
- 4 – Grosses Butées
- 4 – Tampons anti-abrasifs 3M
- 4 – Agrafes noires «C»
- 4 – Vis à tête cylindrique (n° 6 x 3/8 po.)
- 4 – Vis à tête cylindrique (n° 4 x 3/16 po.)

Outils requis

- 1 – Tournevis à embout étoilé n°1
- 1 – Tournevis à embout étoilé n°2



Installation

1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. Ouvrir le capot du véhicule.
2. Installer les deux (2) petites butées sur le haut de la grille tel qu'indiqué à l'illustration n°1. **Attention: Les butées doivent être installées sur le grille et non sur le protecteur!!!!** Si les butées sont installées sur le protecteur, elles endommageront la grille.
3. Centrer le protecteur sur le capot restant sur les butées.
4. Installer les tampons anti-abrasifs aligner avec les trous de la bordure avant du protecteur. S'assurer de couvrir au moins ½ po. en dessous du capot. Voir les illustrations n°2.
5. Glisser les agrafes « C » au-dessus de la bordure du capot s'aligner avec les trous du protecteur. S'assurer que les agrafes « C » sont bien fixées contre le capot: il peut être nécessaire de pousser sur les agrafes « C » pour qu'ils siègent bien au capot. Voir l'illustration n°2.
6. S'assurer que le trou sur le dessus des agrafes « C » s'aligne avec le trou du protecteur. Insérer les vis n° 6 x 3/8 po., au travers du protecteur et dans le dessus des agrafes « C ». Ne pas trop serrer. Voir l'illustration n° 2. S'assurer que les agrafes « C » sont bien installées.
7. S'assurer que les agrafes sont bien installées sur le capot. Serrer les vis (n° 4 x 3/16 po.) en arrière des agrafes. Voir l'illustration n°2.
8. Installer les quatre (4) butées tel qu'indiqué à l'illustration n° 1. **Attention: Les butées doivent être posées sur le capot et non sur le protecteur!!!** Si les butées sont installées sur le protecteur, elles useront la peinture.
9. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.
Important: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.

Instruction pour l'entretien

Nettoyer le protecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu. Éviter de laver le véhicule dans un lave-auto automatique. Ne pas tirer sur le protecteur pour ouvrir ou fermer le capot.

Illustration n°1: Emplacement des butées


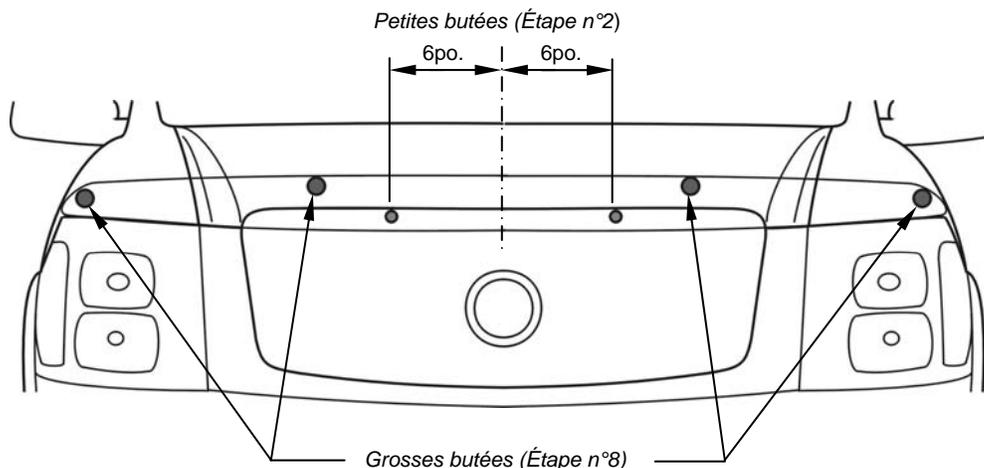


Illustration n°2: Emplacement et configuration de l'agrafe

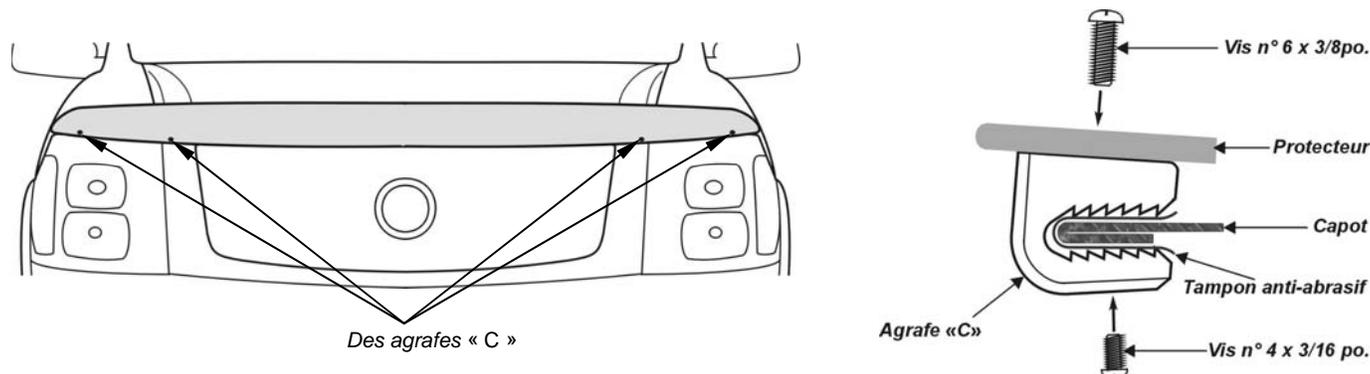

Merci de vous êtes procuré un protecteur **FORM FIT**.

Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.

Fabriqué au Canada

Rev1.040505