

# INSTALLATION INSTRUCTIONS

HONDA ACCORD 4 DOOR 1998 – 2000

938-4

## HARDWARE KIT

- 3 – Expansion Plugs
- 3 – #6 x ½" Pan Head Sheet Metal Screws
- 5 – Large Bumpons
- 2 – 3M Anti-abrasion Film Pads
- 2 – Black 'E' clips – See supplemental instruction "Installing Black 'E' Clips onto Deflector"

## TOOLS REQUIRED

- 1 – Flat Head Screwdriver
- 1 – Side Cutters
- 1 – Phillips Screwdriver



## INSTALLATION

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. The center portion of the hood trim (the chip guard) must be removed. Do so by cutting the seven retaining clips with side cutters or alternately, by prying them out of their holes with a flat blade screwdriver.
3. Center the deflector on the hood. Insert the expansion plugs through the deflector into the corresponding holes in the hood. Be sure that the plugs and the deflector are well seated then snug the screws into the expansion plugs. *See Figure #1.*
4. Install the five (5) bumpons on the hood according to *Figure #2*. One at each end above the 'E' clips, one at the center and one mounted **outboard** of each of the hood creases. The bumpons should be mounted at the point where the deflector begins to turn up. **Attention: The bumpons must be installed on the hood not on the deflector!!!!** If the bumpons are installed on the deflector they will wear through the paint.
5. Install the anti-abrasion film pads directly under where the 'E' clips will attach to the hood. Wrap the pads over the leading edge of the hood to cover at least ½" underneath.
6. Attach the 'E' clips by gently pulling the deflector wings towards the leading edge of the hood until they slide over and clip onto the hood edge. It may be necessary to tap on the clips to fully seat them.
7. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.  
**Note: Do not pull on the deflector when opening or closing the hood.**

## CARE INSTRUCTIONS

Clean the deflector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and the deflector is secure. Avoid using automatic car washes. Do not pull on the deflector when opening or closing the hood.

FIGURE #1: HARDWARE ASSEMBLY


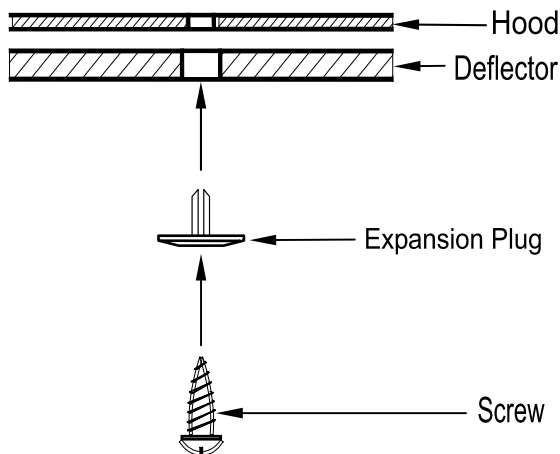


FIGURE #2: BUMPON LOCATION

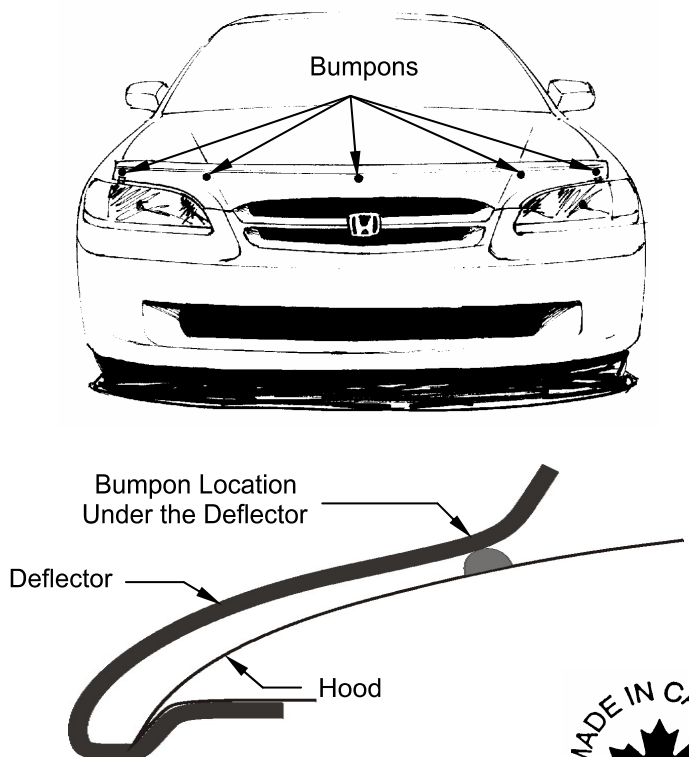

Thank you for purchasing a **FORM FIT** hood deflector.  
Retain this sheet for care instructions and kit information.

Rev5.070911

# INSTRUCTIONS D'ASSEMBLAGE

HONDA ACCORD 4 PORTE 1998 – 2000

938-4

## Sachet de fixations

- 3 – Bouchons expansibles
- 3 – Vis pour tôle à têtes fraisées (n° 6 x ½ po.)
- 5 – Grosses butées
- 2 – Tampons anti-abrasifs 3M
- 2 – Agrafes noires « E » – Voir l'instruction supplémentaire « installer le noir E' agrafes sur le déflecteur »

## Outils requis

- 1 – Tournevis à tête plate
- 1 – Paire de pinces coupantes
- 1 – Tournevis à tête étoilé (Phillips)



## Installation


1. S'assurer que le capot est propre et sec à l'intérieur comme l'extérieur. Ouvrir le capot du véhicule.
2. Enlever le joint d'étanchéité de la section centre en coupant les sept agrafes de retenues avec des pinces coupantes ou en les sortant de leurs trous avec un tournevis à tête plate.
3. Centrer le déflecteur sur le capot. Introduire les bouchons expansibles dans le déflecteur aux trous correspondant du capot. S'assurer que tous les éléments reposent bien contre le capot, puis introduire les vis dans les bouchons expansibles et les serrer. Voir l'illustration n° 1.
4. Installer les cinq (5) butées sur le capot tel qu'indiqué à l'illustration n° 2. Installer une butée au centre, une derrière chaque agrafe « E » du déflecteur et une autre sur chaque coté extérieur du capot où la surface devient concave. Les butées doivent être installées là où le déflecteur commence à se relever. **Attention: Les butées doivent être posées sur le capot et non sur le déflecteur !!** Si les butées sont installées sur le déflecteur, elles useront la peinture.
5. Sous chacune des agrafes « E » (déjà fixées au déflecteur) placer un tampon anti-abrasif sur la moitié du bord avant du capot et au moins ½ pouce au-dessous du capot.
6. Attacher les agrafes « E » au capot en tirant prudemment les ailes du déflecteur vers le bord avant du capot jusqu'à ce qu'elles glissent par-dessous et s'agrafent au rebord du capot.
7. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.

**Important: Ne jamais se servir du déflecteur pour ouvrir ou fermer le capot.**


## Instructions pour l'entretien

Nettoyer le déflecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le déflecteur est toujours bien retenu. Éviter de laver le véhicule dans un lave-auto automatique. Ne pas tirer sur le déflecteur pour ouvrir ou fermer le capot.

### Illustration n° 1 : Assemblage

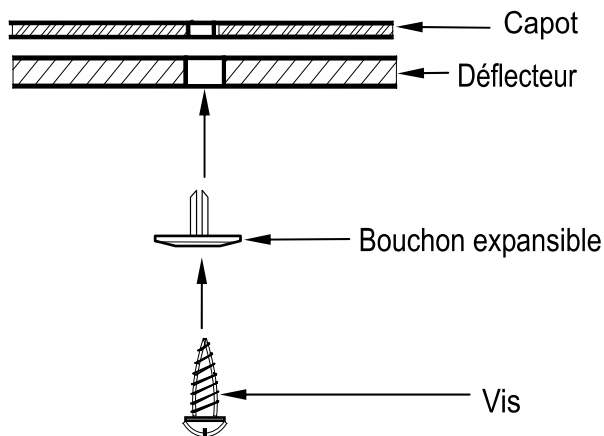

### Illustration n° 2 : Emplacement des butées

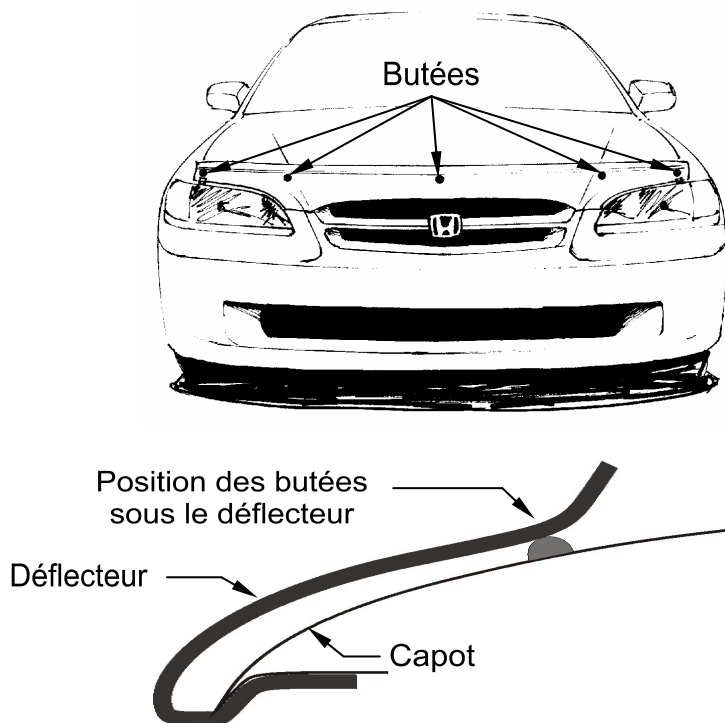

Merci de vous être procuré un déflecteur **FORM FIT**. Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.

Fabriqué au Canada

Rev5.070911