

Installation Instructions

Nissan Xterra 2005 - up

HARDWARE KIT

- 2 – Large Bumpons
- 4 – # 10 x 5/8" Screws
- 4 – Plastic Expansion Plugs
- 2 – 3M Anti-Abrasion Film Pads
- 2 – Clip Bodies
- 2 – 'L' Brackets
- 2 – # 6 x 5/8" Flat Head Screws
- 2 – Pins

TOOLS REQUIRED

- 1 – Phillips Screwdriver # 2
- 1 – Tape Measure



1. Be sure that the hood is clean and dry inside and out. Release the hood, but do not open it.
2. Install the bumpons as shown in *Illustration #1*. **Attention: The bumpons must be installed on the hood, not on the protector!!!** If the bumpons are installed on the protector, they will wear through the paint.
3. Open the hood. The four (4) holes in the protector will align with the holes on the underside of the hood. Push a plastic expansion plug through each of the holes in the protector and into the corresponding holes in the hood. *See Illustration #2*.
4. It will be necessary to hold the expansion plugs in the holes with your thumb while, inserting and tightening the screws. *See Illustration #2*.
5. With the protector centered on the hood, peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath each of the two (2) holes in the protector. *See Illustrations #3 – Step #5*.
6. a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown below in *Illustration #3 – Step #6a*.
b) Insert a pin through the protector into each of the clips. *See Illustration #3 – Step #6b*.
c) Insert a #6 x 5/8" screw through an 'L'- bracket and into the clip. *See Illustration #3 – Step #6c & 6d*.
d) Make sure all the components are well seated together; the protector is centered on the hood, and then tighten the screws into the clips.
7. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.
Note: Do not pull on the protector when opening or closing the hood.

CARE INSTRUCTIONS

Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and the protector is secure. Avoid using automatic car washes. Do not pull on protector when opening or closing the hood.

Illustration #1 – Bumpon Placement

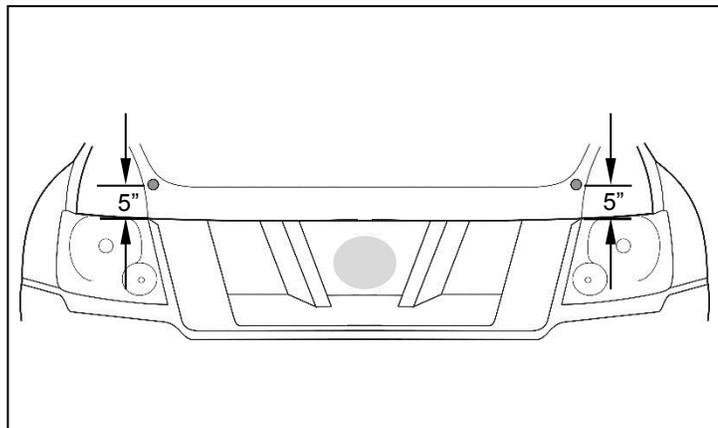


Illustration #2 – Hardware Installation


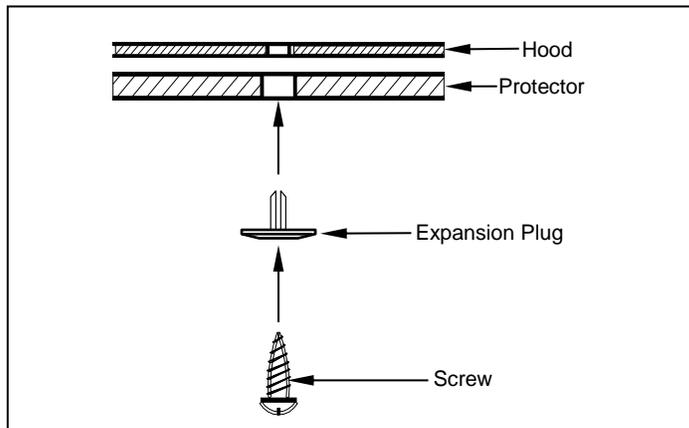


Illustration #3 – Clip Configuration – Patent No. 6,892,427

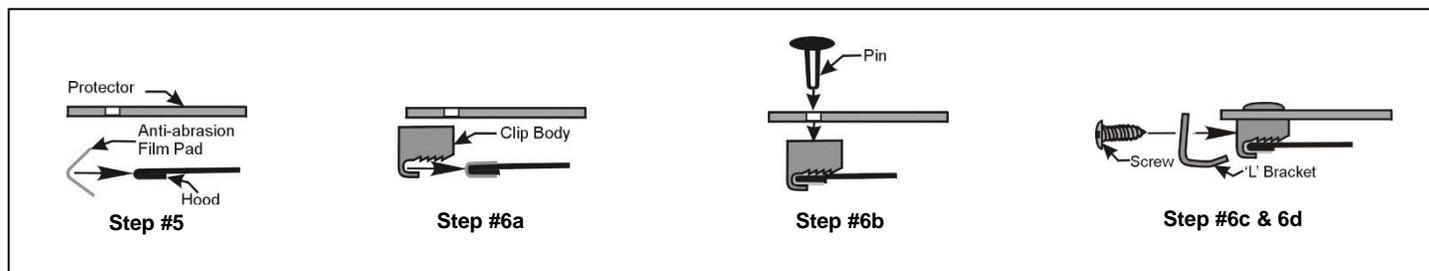

Thank you for purchasing a **FORM FIT** hood protector.
Retain sheet for Care Instructions and Kit Information.

INSTRUCTIONS D'INSTALLATION

Nissan Xterra 2005 - up

Sachet des fixations

- 2 – Grosses butées
- 4 – Obturateurs expansibles en plastiques
- 4 – Vis à têtes fraisées (n°10 x 5/8 po.)
- 2 – Tampons anti-abrasifs 3M
- 2 – Agrafes noires
- 2 – Braquets en forme « L »
- 2 – Vis à têtes plate (n°6 x 5/8 po.)
- 2 – Épingles noires

Outils requis

- 1 – Tournevis à embout étoilé (n°2)
- 1 – Ruban à mesurer



1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. Déclencher le capot mais ne pas l'ouvrir.
2. Installer les butées tel qu'indiqué à l'illustration n°1. **Attention: Les butées doivent être installées sur le capot et non sur le protecteur!!!!** Si les butées sont installées sur le protecteur, elles useront la peinture.
3. Ouvrir le capot. Les (4) quatre orifices du protecteur vont s'aligner avec les orifices du dessous du capot. Introduire un bouchon expansible dans chaque orifice du protecteur et dans les orifices correspondant du capot. Voir l'illustration n° 2.
4. Il est nécessaire de retenir les bouchons expansibles dans les trous avec le pouce pendant l'insertion et le vissage des vis. Voir l'illustration n° 2.
5. Peler et plier en deux les tampons anti-abrasifs sur la bordure avant du capot en dessous des (2) deux trous. Voir les illustrations n°3 – étape n°5.
6. a) Monter une agrafe sur chaque tampon anti-abrasif sur la bordure du capot. Voir l'illustration n°3 – étape n°6a.
b) Insérer une épingle au travers du protecteur et dans l'agrafe. Voir l'illustration n°3 – étape n°6b.
c) Insérer une vis (n°6 x 5/8 po.) au travers du braquet en forme «L» et dans l'agrafe. Voir l'illustration n°3 – étape n°6c et n°6d.
d) S'assurer que tous les composants sont bien installés sur le capot et serrer les vis dans les agrafes.
7. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et/ ou la fermeture du capot pour obtenir un bon dégagement. **Important: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.**

Instructions pour l'entretien

Nettoyer le protecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ni de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu. Éviter de laver le véhicule dans une lave-auto automatique. Ne pas tirer sur le protecteur pour ouvrir ou fermer le capot.

Illustration n° 1 - Emplacements des butées

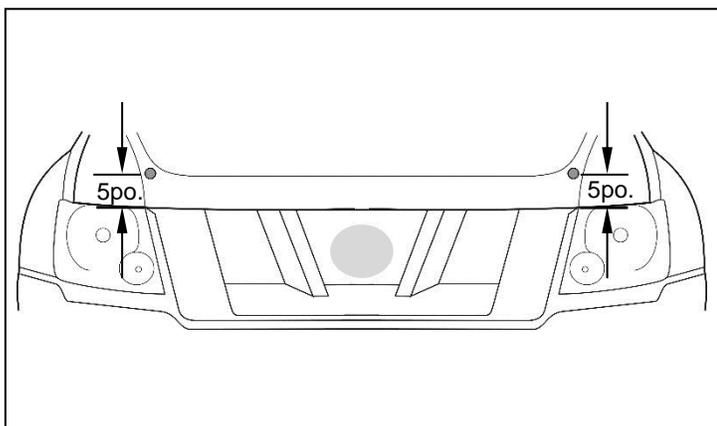


Illustration n° 2 – Assemblage


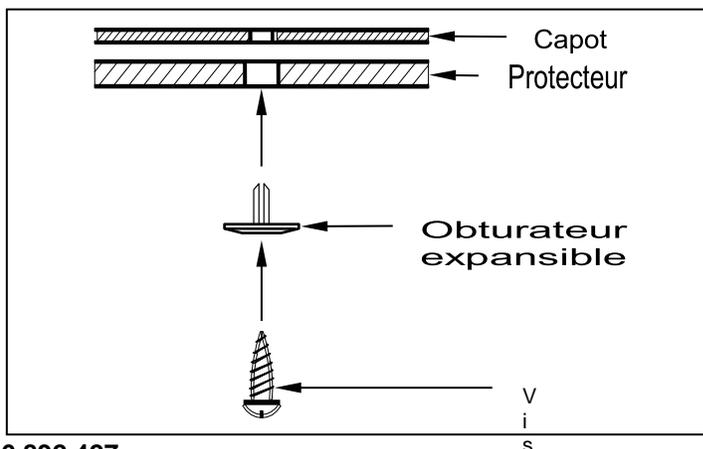


Illustration n° 3 - Configuration de l'agrafe – N° de brevet : 6,892,427

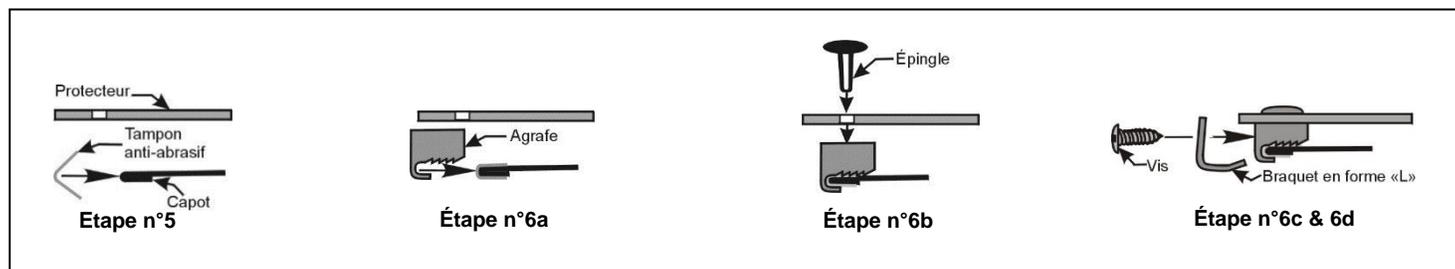

Merci d'avoir acheté un protecteur de capot a **FORMFIT**.

Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.